



## Leather Flexing Tester

It applies to the scratching resistance test of leather, lining, fabric and the similar material at room temperature. One side face of the sample is as the inner surface and the other side face as the outside surface and bend this surface back and forth, write down the times that the sample have broken; Or set the breakage time, then take it out and observe the degree it broken.

Fixture option (A) 6 Groups (B)12 Groups

Specimens test block 70x 45mm, attach cutting knife

Bending Angle 22.5°

Bend speed 100± 5cm

Counter LCD display, 0-999999 Automatic shutdown

Machine Size 500x 580x 300mm

Weight (A)69kg (B)78kg

Power AC220V, 20A

Testing Standards

BS-3144, JIB-K6545

